

QUAD HARMONIC QUARTZ CHIMING CLOCK INSTRUCTIONS

To Set the Time and Melody

IMPORTANT: Before inserting the batteries, make sure to set the time to 5:50 by turning the hand-set knob on the back of the movement. Clock will NOT chime correctly if hands are not turned to 5:50 before inserting batteries.

1. **Before inserting batteries, see above.** Insert the batteries according to (+) and (-) marking in the battery compartment. (When the batteries are inserted, melody function is automatically set for 6.00 A.M. regardless of the time indicated on your clock.)
2. To set the time and melody, please make sure to turn the hands **CLOCKWISE ONLY and ONLY with the hand-set knob on the back of the movement.** The hour strike will not be correct if hands are turned counter clockwise with batteries installed. If present time is P.M., make sure hour hand passes through 12 o'clock noon until the desired time is shown. While setting the time the clock will start chiming after the minute hands passes the 12:00 o'clock position, you do not have to wait until it finishes chiming, keep advancing the hands until the desired time is shown. Once the desired time is set, melody starts sounding correctly.
3. Chimes may not sound correctly during the first hour after time is set. However, after that it works perfectly. **After making any changes to switches (E) or (F), it can take up to 1 hour for the new setting to take affect.** This is normal for this movement.
4. **Daylight Savings Time.** When changing time in the spring, turn the hand-set knob on the back of the movement forward 1 hour. When changing back in the fall, turn the hand-set knob forward 23 hours. Never turn the hands counter clockwise, the hour strike will not be correct.

If at any time, clock does not chime correctly, remove both batteries and refer to highlighted paragraph above.

MELODY FUNCTION

Monitor (A)

To demonstrate the hourly sound, select the melody, button (e) and press the MONITOR button (a).

Volume (B)

Select the volume by turning button (b)

Melody (E)

Select the melody by switch (e)


4X4 WESTMINSTER: Westminster chimes (every 15 minutes plus the hour strike).

4X4 AVE MARIA: Ave Maria chimes (every 15 minutes plus the hour strike).

WESTMINSTER: Westminster chimes and strikes on the hour only.

BIM BAM: Strikes on the hour and half hour only.

GONG: Strikes on the hour only.

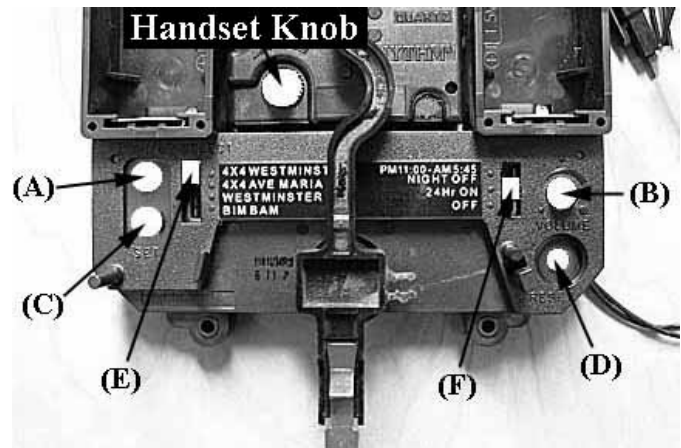

Chime On/Off (F)

Night Off: Turns the chime and strike off from 11:00 pm to 5:45 am.

24Hr ON: Chimes and strikes 24 hours a day.

OFF: Turns the chime and strike off (will not chime or strike)

Battery Replacement

If the clock begins to lose time, chime weakens, chimes cut-off, or pendulum stops swinging, replace with new alkaline batteries.

July 21, 2015

IMPORTANT (C) (D) FOR TECHNICAL USE ONLY

Set (C) : Advances the hour strike count 1 hour. It will not move the hands.

Reset (D): Resets the next hour strike to 6:00AM.

If you unintentionally press either C or D or the chimes are out of sequence, please remove both batteries and refer to beginning of instructions.

WARRANTY

KAUFFMAN'S HANDCRAFTED CLOCKS

3019 WEST NEWPORT ROAD, RONKS, PA 17572

717-656-6857

www.KHClock.com

(2 YEAR LIMITED WARRANTY ON QUARTZ CLOCKS)

This clock has been thoroughly tested, and is guaranteed for a period of 2 years against defects in materials and workmanship. Any necessary repairs during that period will be made without charge. (THIS GUARANTEED IS VOID ON CLOCKS THAT HAVE BEEN WET, TAMPERED WITH, LEAKING BATTERIES, IMPROPERLY OILED, TAKEN APART, OR OTHERWISE MISHANDLED)

If your clock has to be returned for repairs, it must be properly packaged and protected to insure safe delivery to our store.

You must include a copy of the original receipt.

IT IS THE RESPONSIBLY OF THE CUSTOMER TO EITHER, SHIP OR RETURN THE CLOCK TO BE REPAIRED UNDER WARRANTY. THE CUSTOMER IS RESPONSIBLE FOR ALL SHIPPING COSTS, TO AND FROM OUR PLACE OF BUSINESS.

PLEASE KEEP FOR YOUR RECORDS

DATE OF PURCHASE _____

MODEL NO. _____

SERIAL NO. _____